


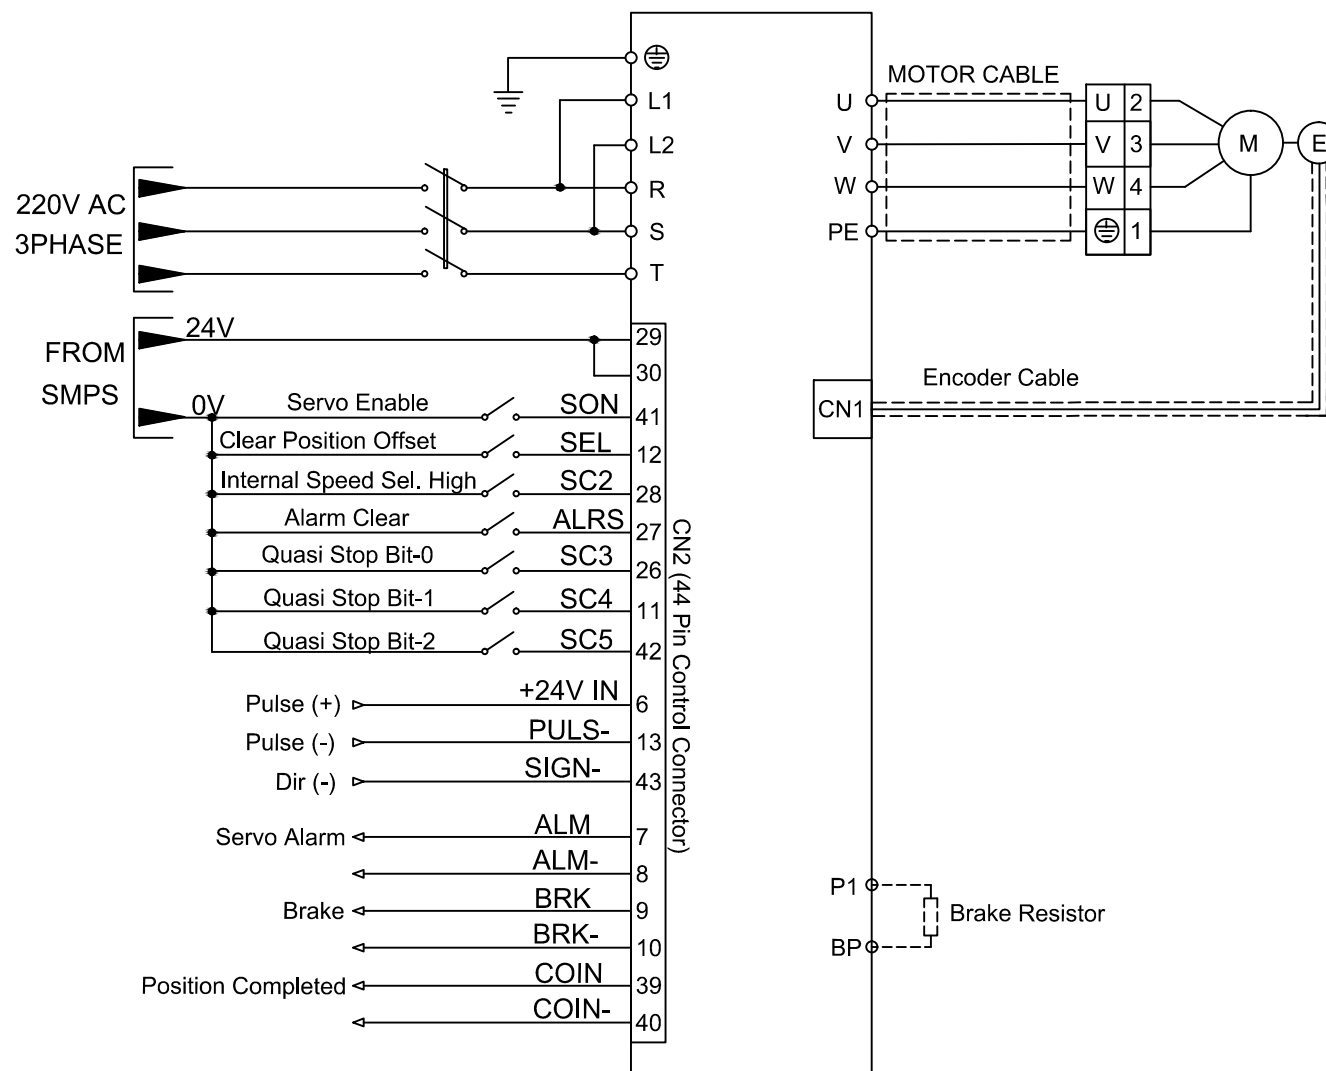

MR-ECOS-220 : PARAMETERS FOR POSITION MODE OPERATION			
PARA	NAME	VALUE RANGE	DEFAULT VALUE
PA 0	Password (Motor ID)	302	315
PA 01	Motor ID	XYZ	See name plate
PA 0	Password (Next Para)	315	315
PA 04	Control Mode	0	0
PA 09	Proportional Position Loop Gain	0 - 1000	130 Hz
PA 10	Position Feed Fwd Loop Gain	0 - 100	0
PA 11	Filter Time Constant of PA10	0 - 1000	0 MS
PA 12	Pulse Electronic GR (Numerator) N1	1 - 300000	1
PA 13	Pulse Electronic GR (Denominnator) M1	1 - 300000	1
PA 14	External Pulse type	0 - 2	0
PA 15	Dir. of Ext. Pulse	0 - 1	0
PA 16	Positon completion range	0 - 30000	20
PA 17	Position Error range	0 - 30000	400
PA 18	Pos. Error Invalid Control Bit range	0 - 1	0
PA 19	Positon command Smooth Filter	0 - 30000	0
PA 20	Inhibit drive function	0 - 1	0
PA 53	Enable Word	1	1
EE-SET	EPROM Set	ENTER	
	Now Display show	FINISH	

